



## **CHORUSAURUS®**

Combining analog bucket-brigade technology with the precision and flexibility of modern circuits, the Chorusaurus® produces lush, organic chorusing effects that won't compromise your low end. Using intuitive and flexible controls, bassists can dial in that perfect chorus effect.

### **Features:**

- Uses analog bucket-brigade technology
- Independent adjustment of all chorus effect parameters
- Stereo or Mono output
- Gig-saver bypass (signal passes even if your battery dies)
- Heavy duty steel construction
- Three-year limited warranty
- Power: 9 volt battery or optional power supply

# Owner's Manual

Manual Version 1.1

## **I. Functions**

### A. Top Panel:

**BLEND:** Controls the mix ratio between clean and modulated signal.

The most dramatic chorusing effect is achieved when the knob is set to the 12:00 position (50:50 ratio).

When this knob is fully counterclockwise the mix ratio is 90:10 in favor of clean signal. When this knob is fully clockwise the mix ratio is reversed and favors the modulated signal 10:90.

**RATE:** Controls the speed of modulation.

**INTENSITY:** Controls the intensity of the modulation. Higher intensity produces more dramatic chorusing effect.

**WIDTH:** Sets the range for the INTENSITY to work within. Turning WIDTH clockwise will broaden the range, allowing more intense effect.

**ENGAGE:** Toggles between on and off. The blue LED indicates that the effect is on.

### B. Side Panel:

**IN:** ¼" input

**DC IN:** This is a standard 2.1mm DC jack. The center terminal polarity is negative.

**OUT:** ¼" output

- For mono output use a standard ¼" cable to your amplifier.
- For stereo operation with two amplifiers use a ¼" Y adapter cable with one ¼" TRS plug to two ¼" TS jacks.

### C. **Specifications:**

Current consumption:.....12mA  
Input impedance: .....1M $\Omega$  (Effect On)  
Output impedance: .....1 K $\Omega$   
External DC Power: .....9-10VDC, center terminal negative

## **II. Sample Settings**

Please visit our website, [www.aguilaramp.com](http://www.aguilaramp.com), for sample settings.

## **III. How to change the battery**

This operation can be done quickly and easily with a standard #2 Philips screw driver!

The battery is easily accessible by loosening the screw on the bottom of the unit. The battery compartment will slide forward and you will be able to see the padded area to insert the battery and attach the battery clips. Once the battery has been replaced, simply slide the compartment back in and tighten the screw.

#### **IV. Warranty Information**

The Chorusaurus® is covered under limited warranty against defects in materials and workmanship for a period of 3 years. This warranty is non-transferable.

The warranty period starts from the date of purchase from an authorized Aguilar dealer. Please retain your sales receipt as it is necessary to obtain warranty service.

Before sending your unit to Aguilar for repair, you must receive a return authorization number from us. Please contact us via email (techsupport@aguilaramp.com). Do not send any products to us without first receiving a return authorization from Aguilar.

You are responsible for all shipping charges. You must ship the unit to us freight prepaid. We will return the unit to you freight collect. Aguilar Amplification LLC is not responsible for shipping damage, either to or from our service center. Claims must be filed with the carrier.

The only company in the USA authorized to perform work under this warranty is Aguilar Amplification LLC of New York, NY.

**Warranty service outside the USA:** Warranty Service may be different in your country. Please contact the Aguilar distributor in your country for terms and procedures.

Aguilar Amplification LLC  
599 Broadway, 7th fl.  
NY, NY 10012  
[www.aguilaramp.com](http://www.aguilaramp.com)